

Movement

This heading gives a different damping of the mA output to that normally for the entered Fill Damp and Empty Damp values.

The echo, if it moves less than the distance given by the value entered in the Movement heading, a damping of the addition of the Fill Damp, Empty Damp numbers will be used.

le: If you have Fill Damp 100 and Empty Damp 250. The damping within the echo Movement distance will automatically damp at the larger 350 entered value.

If the echo Movement is larger than the entered movement number, normal Fill Damp and Empty Damp occurs.